

HSP 7

Equipment sheet Pellet stove

GB

Introduction

We thank you very much for purchasing our product!

The description of the heating device will inform you in detail about the design, technical specification and operation of the heating device. We recommend you to acquaint yourselves closely with these data. In this way, you will avoid possible faults during the proper assembly and operation.

You will find detailed conditions of installation and operation in General Manual of Operation (included in the scope of the delivery).

Notes in the text



Of utmost importance there are the notes entitled **WARNING**. The notes entitled **WARNING** advise you on serious danger of damage to the heating device or of an injury.



The note entitled **Notice** advises you on possible damage to your heating device.



The note entitled **Important** calls your attention to the information important for the operation of your heating device.



The note itself calls your attention to the information important for the operation of your heating device in general.

Contents

1. Technical data	1
2. Dimensions	2
3. Pellet Stove Installation and Connection to Chimney	3
4. Cleaning work 4.1. Cleaning the surface 4.2. Cleaning the glass panel	
4.3. Clean combustion chamber "function instruction" Error F0404.4. Cleaning the combustion pot - weekly	
5. Maintenance work	9 14
6. Replacement parts list. 6.1. Replacement parts list HSP 7 450.08. 6.2. Detail A1.	15
7. Circuit diagram	19

Important Information from Manufacturer!

IMPORTANT			

Please, observe the following instructions:

Quality of wood pellets:

Depending on the manufacturer, there are light, dark, shorter or longer pellets. **Even deliveries from one supplier may contain different qualities.** Standards for wood pellets are constantly tightened, but: The wood remains wood and has its peculiarities in terms of ash and slag.

Cleaning:

Once you find ash and slag deposits in the cold combustion chamber, you must clean it. **See Chapter 4 and 5.** If you fail to do it, the layer will increase and the stove will no longer be able to self-ignite properly.

The pellets may accumulate in the combustion chamber. In the extreme case, the pellets can accumulate up to their filling chute. Possible consequences could result in their bursting in the flame and burning in the pellet container. It would destroy your stove, which is not covered by the warranty.

To ensure maximum service life and trouble-free operation:

Read the installation and operating instructions carefully and completely. We recommend keeping it if required in future.

1. Enhanced daily control according to the instructions should be carried out on each new supply of pellets or if the stove has been shut down for a longer period of time – e.g. summer season.

2. Recommendations:


Consign the first installation and their first cleaning and inspection to one of our contracted professional service organizations. Their employees are professionally trained and have the knowledge needed to install your new pellet stove safely, put it into operation and carry out its maintenance. They will personally familiarize you with the rules of its use and maintenance and will show you the stove in practice.


Keep in mind that in the event of any malfunctions due to improper installation, operation or maintenance, your warranty claims will be lost.


1. Technical data

	HSP 7 450.08
Heat output range:	2,4 – 8,2 kW
Nominal heat output:	8,0 kW
Height:	1053 mm
Width:	494 mm
Depth:	494 mm
Weight:	128 kg
Diameter of flue elbow:	80 mm
Flue gas temperature:	197 °C
Testing transport pressure at nominal output:	12 Pa
Testing transport pressure at partial output:	6 Pa
Flue gas flow rate in g/s	5,6 g/s
CO level in flue gas (%) (min./max.)	0,01/0,03 %
Efficiency:	90/94 %
CO level in flue gas:	138 mg/Nm³
NOx level in flue gas:	131 mg/Nm³
OGC level in flue gas:	5 mg/Nm³
Proportion of dust in flue gas:	17 mg/Nm³
Contents of storage container (pellet tank):	about 12 kg
Duration of burn with one charge (min./max.):	about 7 h/22 h
Permitted fuel: Low-dust wood pellets	diameter: 6 mm
to Ö-Norm M 7135, DIN plus, EN plus-A1	length: max. 30 mm
Room heating capacity to Ö-Norm M 7521:	max. 230 m³
Room heating capacity to DIN 18893, constant heating:	250m³/145m³/98m³
Room heating capacity to DIN 18893, timed heating:	165m³/95m³/65m³
Electricity supply:	230 V (50 Hz)
Electricity supply input in normal operation:	max. 50 W
Electric ignition (for max. 15 minutes on ignition):	max. 380 W
Electronics fuses: (F3)	T 0,315 A, 250 V
Fuses for the ignition, screw conveyor motor, induced draught, (F1), conv. fan (F2):	T 3,15 A, 250 V

2. Dimensions

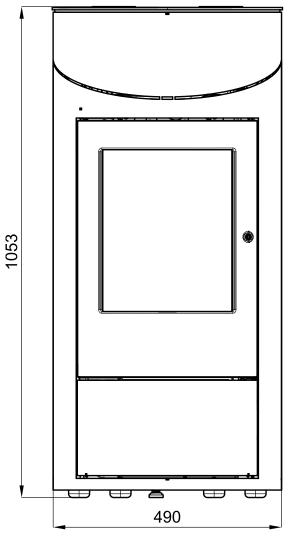

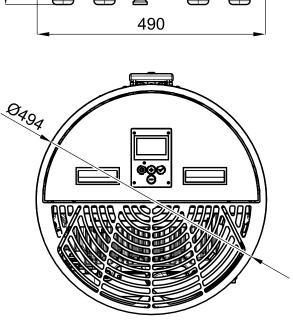

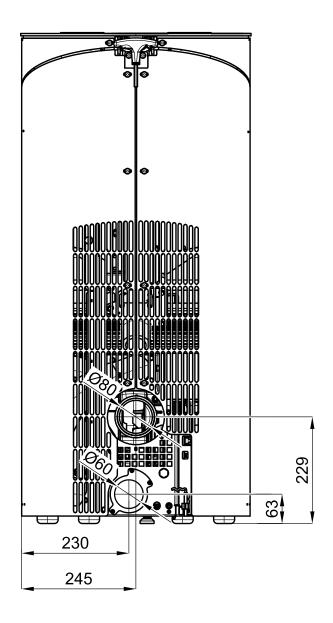

3. Pellet Stove Installation and Connection to Chimney

The pellet stoves must be connected to a separate chimney. It is not permissible to divert flue gas from other equipment to this chimney. Flue gases are fed through an 80 mm smoke duct connected to the stove smokeflue being located on the rear side of the stoves. The smoke-flue should be fitted with a T-piece and stopper, see fig. 1.1 - 1.3. The smoke-flue must be made of steel or stainless steel tubes. The horizontal part of the smoke-flue must have an incline of at least 5 % (3°) upwards from the heater. The connection must be made in the shortest way with a maximum length of 1.5 m and max. 2 fittings (T-piece, elbow). The connection of the solid fuel heater to the chimney must comply with the provisions of ČSN 73 4201 standard. It is necessary to observe all requirements for the chimney body which are required by the standard.

Under the Government Decree No. 91/2010 Coll. It is necessary to revise the combustion routes:

- before the flue route is put into operation or after each chimney reconstruction
- · before replacing or re-installing a fuel appliance

The inspection is carried out by a competent chimney sweep who is also a chimney inspection technician.

Informative examples of pellet stove installation and connection to chimney:

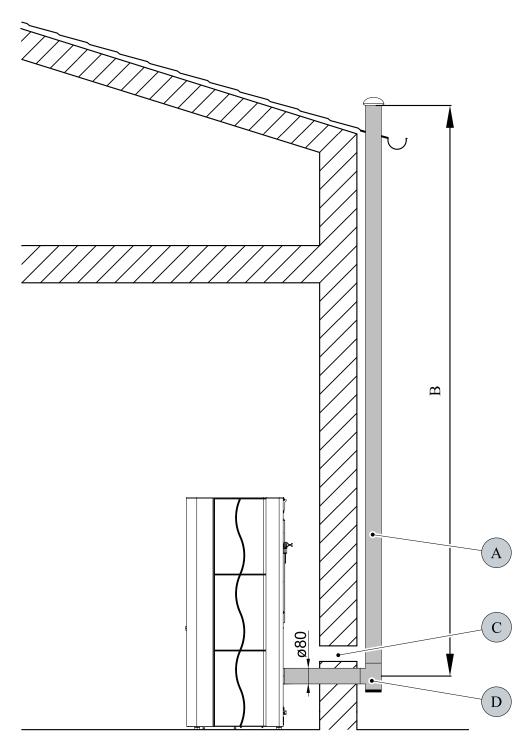


Figure 1.1: Chimney outside the building

- A) Chimney situated outside the building
- B) Effective chimney height. The chimney must be led above the roof level and fitted with thermal insulation
- C) External air inlet to the heater
- D) T-piece with stopper

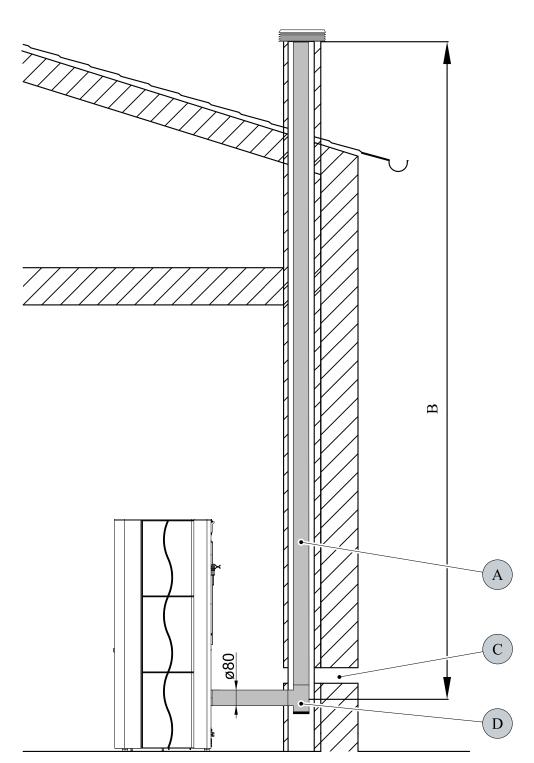


Figure 1.2: Chimney as a part of building

- A) The smoke-flue inserted into the existing chimney. Here, the possibility of cleaning is required.
- B) Effective chimney height.
- C) External air inlet to the heater
- D) T-piece with stopper

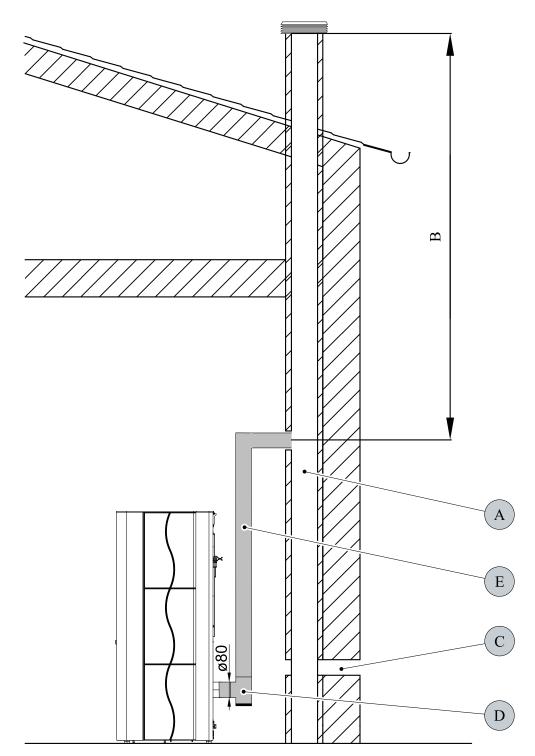


Figure 1.3: Connection to the existing chimney

- A) Venting unit
- B) Effective chimney height.
- C) External air inlet to the heater
- D) T-piece with stopper
- E) Smoke-flue

4. Cleaning work



Before starting any cleaning work, the stove must be cool down!

Once the cleaning work is completed, the correct operating status of the device must be reestablished: Put the combustion pot in correctly, close the combustion chamber door.

4.1. Cleaning the surface

Dirt on the upper surface of the stove may be cleaned off with a damp cloth or if necessary with mild soapy water. You are advised against using corrosive cleaning agents and solvents since these might damage the surfaces.

4.2. Cleaning the glass panel

To clean the viewing panel, you must first open the stove door. Dirt on the glass panel can be removed with a glass cleaner or with a damp sponge on which you have sprinkled some of the wood ash present. (Environmentally friendly). Cleaning the glass panel may only be done with a cooled down stove in the OFF operating mode.

4.3. Clean combustion chamber "function instruction" Error F040

- The whole combustion space must be cleaned after 30-hours operation at the latest, or once a week.
- The requirement to clean the fire-box (flickering of the display) appears during heating, in case that the cleaning interval has elapsed.
- After the fire-box has been cleaned, the error message "Clean the fire-box" will be confirmed automatically.
 The condition for automatic confirmation of this error message is that the fire-box door is opened for more than 60 seconds. This time is necessary for careful cleaning of the fore-box, including the burner.
- This reset of the operating hours counter occurs even if the cleaning of the combustion chamber is performed before the 30 operating hours have run provided that the stove is in "Off" operating status and the door is open for longer than 60 seconds during cleaning.

4.4. Cleaning the combustion pot - weekly

During operation, deposits may form in the combustion pot. How quickly the combustion pot becomes dirty depends solely on fuel quality. The deposits or encrustations must be removed from time to time.



If this is not done, the clinker will continue to accumulate. Then the device will no longer be able to ignite properly. Pellets can pile up in the combustion pot. In extreme cases, this can reach all the way back to the pellet chute. Backfire in the pellet container and smouldering in the pellet tank might possibly result.

This will destroy your device and is not covered in your guarantee.



WARNING

Cleaning the combustion pot may only be done with a cooled down stove in "OFF" operating mode. Otherwise there is a risk of burns!

- · Take out the burner bowl from the stove.
- · Remove the remains of ashes and slag.
- · After the cleaning, mount the burner bowl back to its proper position on the burner rest.
- Re-check the proper seating of the burner bowl, in order to avoid any lack of tightness.

Maintenance work

5. Maintenance work



WARNING

Before starting any cleaning work, the stove must be cool down! The mains plug must be pulled out of the power supply socket (always in advance)!

The frequency of maintenance in turn depends to a large extent on the pellet quality (ash content). Quality pellets have a low ash content of about 0.2-0.3%. However, if the ash content is higher (0.5% and over), the interval from maintenance to maintenance is reduced and the accumulation of ash increases by 2 or 3 times.



WARNING

Devices that are not maintained in accordance with our specifications must not be operated. Failure to observe this point will invalidate all guarantee claims.

5.1. Cleaning the flue gas passes



CAUTION_

Check and clean the flue-gas ways, exhaust (flue-gas) fan and flue-gas ducts at the latest after 1000 kg of pellets have been consumed. Clean with a brush or an ash extractor.



CAUTION

After completion of the cleaning make sure that when putting back the covers, the seals are seated in the right positions. It is essential to replace defective seals.

Please perform the long-time cleaning in four steps:

GB

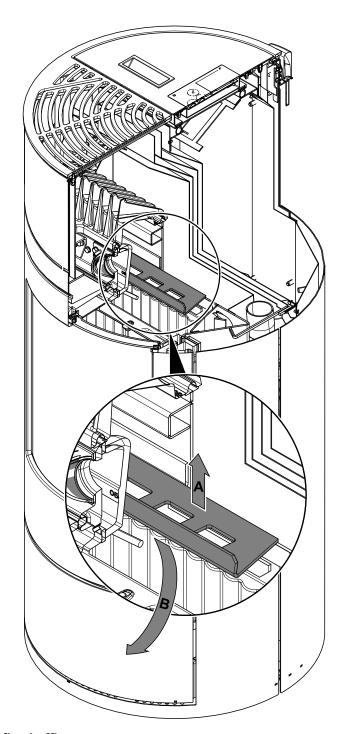


Figure 1: Removing the flue baffle

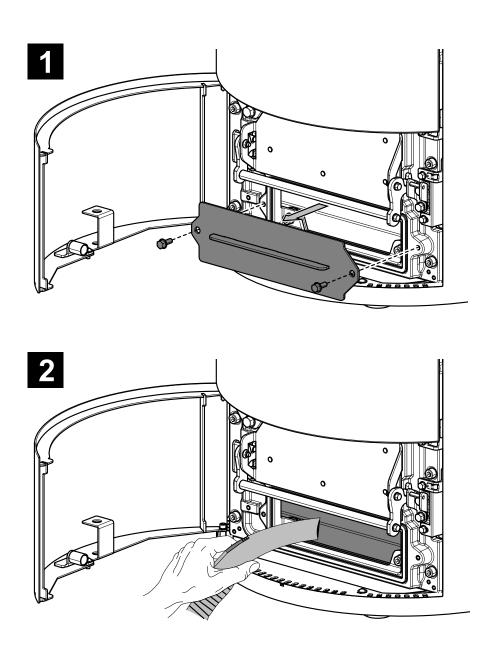


Figure 2: Removing the cleaning cover



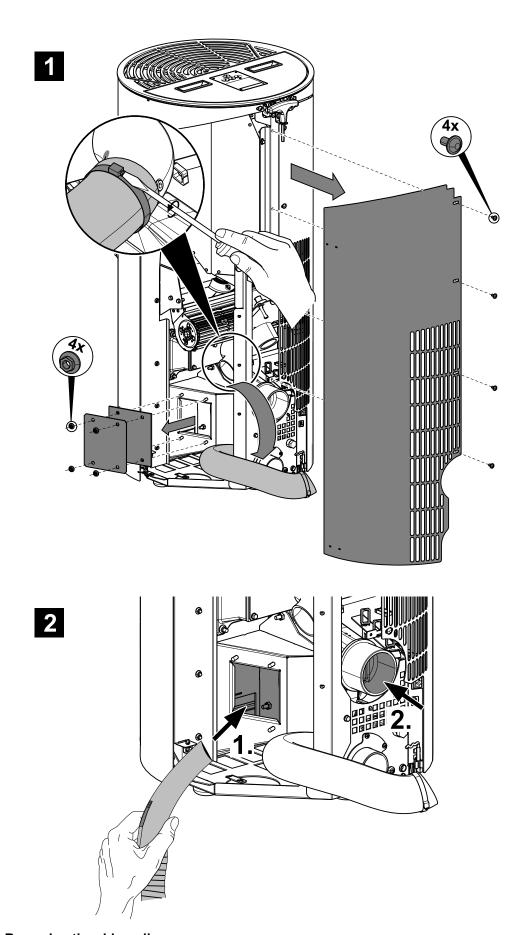


Figure 3: Removing the side wall

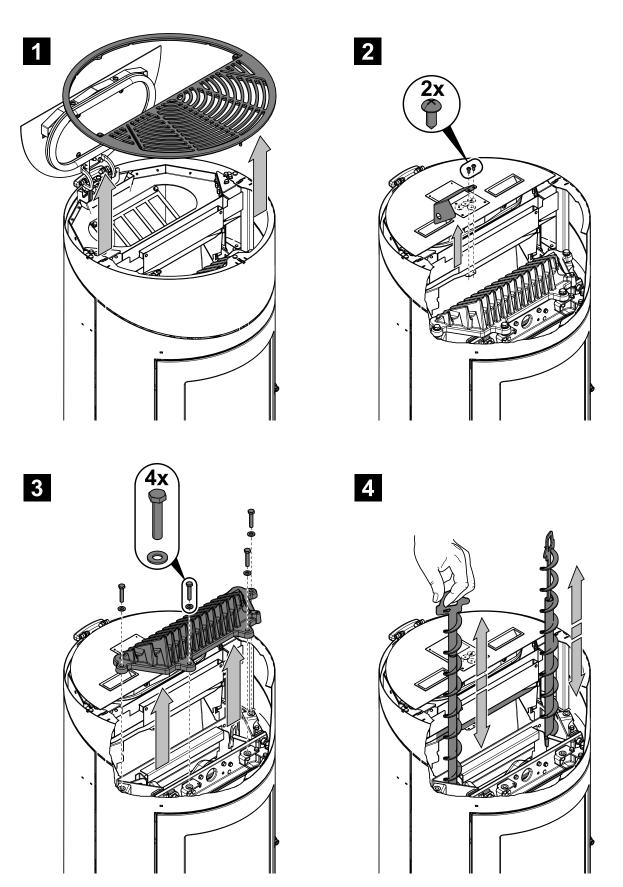


Figure 4: Shake the turbulator

• For cleaning the flue gas passes, shake the turbulator 5 times at least, in compliance with the Fig. 4, pos. 4.

5.2. Cleaning the pellet container - annual maintenance

- · Heat the pellet stove until the storage tank is completely empty.
- Then the protective grille (1) in the pellet tank may be removed.
- Then clean the tank and the intake of the screw conveyor housing with a vacuum cleaner.
- After cleaning, it is essential to put back the protective grille. When doing this, make sure that no screws fall into the pellet tank so as to avoid consequential damage to the screw conveyor.

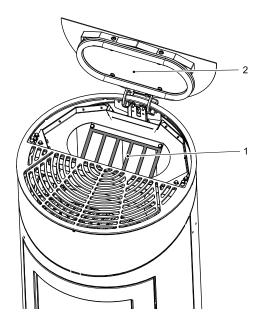


Figure 5: Pellet tank
1 Protective grille
2 Tank cover

5.3. Cleaning of the ash pan - once a week

• Open door, push handle up, and pull out the ash bin.


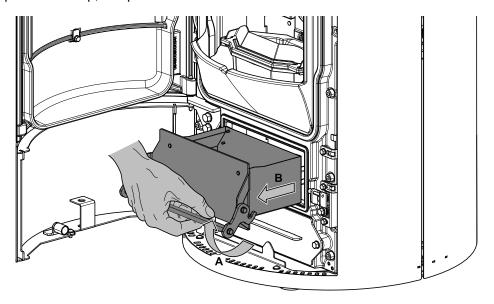


Figure 6

GB

6. Replacement parts list


6.1. Replacement parts list HSP 7 450.08

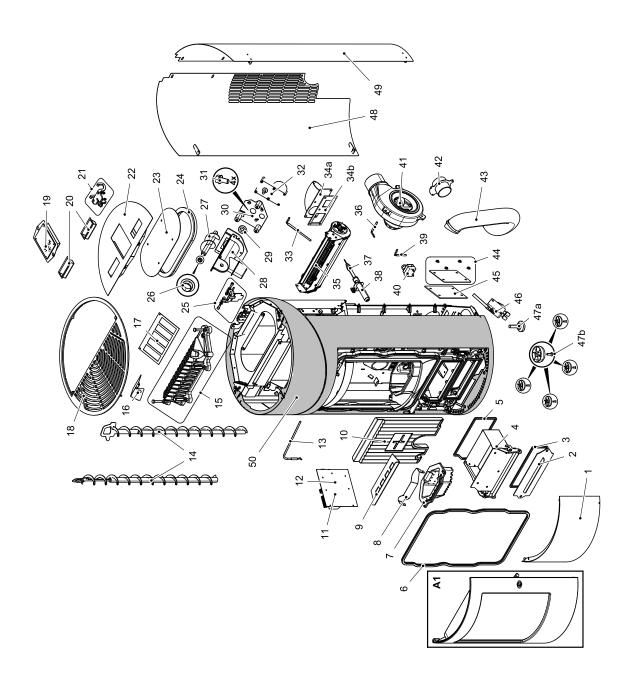

Replacement parts list	Pos.	Description	Piece	Spare part number
1 Ash door panel/black 1 piece 0545008105330 1 Ash door panel/grey 1 piece 0545008115330 2 Cleaning cover front/black 1 piece 0545008005037 3 Seal for cleaning cover 8 mm (620 mm) 1 piece 0040008080005 4 Ash pan/black 1 piece 0545008105600 5 Seal door 11 mm (1600 mm) 1 piece 0040000808005 6 Seal door 11 mm (1600 mm) 1 piece 0040300110006 7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0545008006779 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005073 11 Complete control unit 1 piece 0545008005041 12 Backup battery CR 2032 1 piece 0545008005041 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 0545008006871 15		Replacement parts list		
1 Ash door panel/grey 1 piece 0545008115330 2 Cleaning cover front/black 1 piece 0545008005037 3 Seal for cleaning cover 8 mm (620 mm) 1 piece 0040008080005 4 Ash pan/black 1 piece 0545008105600 5 Seal for ash pan 8 mm (670 mm) 1 piece 0040008080005 6 Seal door 11 mm (1600 mm) 1 piece 0040300110006 7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005073 11 Complete control unit 1 piece 0545008005073 12 Backup battery CR 2032 1 piece 0545008007569 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 0545008006871	A1	Complete combustion chamber door/black	1 piece	0545008005300
2 Cleaning cover front/black 1 piece 0545008005037 3 Seal for cleaning cover 8 mm (620 mm) 1 piece 0040008080005 4 Ash pan/black 1 piece 0545008105600 5 Seal for ash pan 8 mm (670 mm) 1 piece 0040008080005 6 Seal door 11 mm (1600 mm) 1 piece 0040300110006 7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005073 11 Complete control unit 1 piece 0545008005073 12 Backup battery CR 2032 1 piece 0545008007569 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 0545008005030 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008006871 16	1	Ash door panel/black	1 piece	0545008105330
3 Seal for cleaning cover 8 mm (620 mm) 1 piece 0.040008080005 4 Ash pan/black 1 piece 0.545008105600 5 Seal for ash pan 8 mm (670 mm) 1 piece 0.040008080005 6 Seal door 11 mm (1600 mm) 1 piece 0.040300110006 7 Burner cast/black 1 piece 0.545008006756 8 Protection grate 1 piece 0.551908006709 9 Draught baffle plate/black 1 piece 0.545008005073 10 Furnace back wall Vermiculite 1 piece 0.545008005041 11 Complete control unit 1 piece 0.545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0.553808005541 14 Turbulator 2 piece 0.545008005030 15 Furnace lid/black 1 piece 0.545008006871 16 Baffle plate 1 piece 0.545008007652 17 Protective grille 1 piece 0.545008105981 18 Metal cover plate/black 1 piece 0.545008105981 19 Operator console 1 piece 0.571207005510 20 Grip 2 piece 0.089500940005 21 Tank cap hinge/black 1 piece 0.545008105331 22 Tank cover/black 1 piece 0.545008105331 23 Profile retaining plate 1 piece 0.545008105931 24 Seal, tank cover (1000 mm) 1 piece 0.545008105931 25 Tank cap hinge/black 1 piece 0.545008105931 26 Conveyor 1 piece 0.571207005026 27 Screw conveyor bearing 1 piece 0.571207005030 28 Conveyor 1 piece 0.571207005030 30 Motor plate - set 1 piece 0.551908007080 31 Screw UN5950 M5x10 4 piece -	1	Ash door panel/grey	1 piece	0545008115330
4 Ash pan/black 1 piece 0545008105600 5 Seal for ash pan 8 mm (670 mm) 1 piece 0040008080005 6 Seal door 11 mm (1600 mm) 1 piece 0040300110006 7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece 0545008007569 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 054500800530 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008006871 17 Protective grille 1 piece 054500800652 17 Protective grille 1 piece 0545008106931 18 Metal cover plate/bl	2	Cleaning cover front/black	1 piece	0545008005037
5 Seal for ash pan 8 mm (670 mm) 1 piece 0040008080005 6 Seal door 11 mm (1600 mm) 1 piece 0040300110006 7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 0545008005030 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008006871 17 Protective grille 1 piece 0545008006871 18 Metal cover plate/black 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0571207005510 20 Grip	3	Seal for cleaning cover 8 mm (620 mm)	1 piece	0040008080005
6 Seal door 11 mm (1600 mm) 1 piece 0040300110006 7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0545008005541 14 Turbulator 2 piece 0545008005030 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008006871 17 Protective grille 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 20 Grip 2 p	4	Ash pan/black	1 piece	0545008105600
7 Burner cast/black 1 piece 0545008006756 8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 0545008005030 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008006871 17 Protective grille 1 piece 0545008006871 18 Metal cover plate/black 1 piece 0545008105981 19 Operator console 1 piece 0545008106210 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 054500810631 22 Tank cover/fblack 1 piece	5	Seal for ash pan 8 mm (670 mm)	1 piece	0040008080005
8 Protection grate 1 piece 0551908006709 9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 054500800530 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106981 19 Operator console 1 piece 0545008106210 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece </th <th>6</th> <th>Seal door 11 mm (1600 mm)</th> <th>1 piece</th> <th>0040300110006</th>	6	Seal door 11 mm (1600 mm)	1 piece	0040300110006
9 Draught baffle plate/black 1 piece 0545008005073 10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 054500800530 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008007652 18 Metal cover plate/black 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008108341 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm)	7	Burner cast/black	1 piece	0545008006756
10 Furnace back wall Vermiculite 1 piece 0545008005041 11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 054500800530 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008105981 19 Operator console 1 piece 0545008106210 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008108341 23 Profile retaining plate 1 piece 0545008105931 24 Seal, tank cover (1000 mm) 1 piece 054608005189 25 Tank cap hinge/black 1 pi	8	Protection grate	1 piece	0551908006709
11 Complete control unit 1 piece 0545008007569 12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 054500800530 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008105981 19 Operator console 1 piece 0545008106210 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0545008105931 25 Tank cap hinge/black 1 piece 0571207005036 27 Screw conveyor 1 piece	9	Draught baffle plate/black	1 piece	0545008005073
12 Backup battery CR 2032 1 piece - 13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 054500800630 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008108341 23 Profile retaining plate 1 piece 054500806331 24 Seal, tank cover (1000 mm) 1 piece 0545008105931 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor 1 piece 0571207005036 27 Screw conveyor 1 piece	10	Furnace back wall Vermiculite	1 piece	0545008005041
13 Flame temperature sensor 1 piece 0553808005541 14 Turbulator 2 piece 0545008005030 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 054608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece	11	Complete control unit	1 piece	0545008007569
14 Turbulator 2 piece 0545008005030 15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 054608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207016060 29 Collet 1 piece 0551908007080 30 Motor plate - set 1 piece <	12	Backup battery CR 2032	1 piece	-
15 Furnace lid/black 1 piece 0545008006871 16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 054608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0551908007080 30 Motor plate - set 1 piece <td< th=""><th>13</th><th>Flame temperature sensor</th><th>1 piece</th><th>0553808005541</th></td<>	13	Flame temperature sensor	1 piece	0553808005541
16 Baffle plate 1 piece 0545008007652 17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0545008105931 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0551908007080 30 Motor plate - set 1 piece 0551908007080 31 Screw conveyor motor 1 piece	14	Turbulator	2 piece	0545008005030
17 Protective grille 1 piece 0545008105981 18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008006331 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0551908007080 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0	15	Furnace lid/black	1 piece	0545008006871
18 Metal cover plate/black 1 piece 0545008106210 19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0551908007080 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	16	Baffle plate	1 piece	0545008007652
19 Operator console 1 piece 0571207005510 20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	17	Protective grille	1 piece	0545008105981
20 Grip 2 piece 0089500940005 21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0551908007080 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	18	Metal cover plate/black	1 piece	0545008106210
21 Tank cap hinge/black 1 piece 0545008108341 22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	19	Operator console	1 piece	0571207005510
22 Tank cover/black 1 piece 0545008107321 23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 00895000000006	20	Grip	2 piece	0089500940005
23 Profile retaining plate 1 piece 0545008006331 24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 00895000000006	21	Tank cap hinge/black	1 piece	0545008108341
24 Seal, tank cover (1000 mm) 1 piece 0546608005189 25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 00895000000006	22	Tank cover/black	1 piece	0545008107321
25 Tank cap hinge/black 1 piece 0545008105931 26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 00895000000006	23	Profile retaining plate	1 piece	0545008006331
26 Lower screw conveyor bearing 1 piece 0571207005026 27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 00895000000006	24	Seal, tank cover (1000 mm)	1 piece	0546608005189
27 Screw conveyor 1 piece 0571207005030 28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	25	Tank cap hinge/black	1 piece	0545008105931
28 Conveyor 1 piece 0571207016060 29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	26	Lower screw conveyor bearing	1 piece	0571207005026
29 Collet 1 piece 0089000345000 30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	27	Screw conveyor	1 piece	0571207005030
30 Motor plate - set 1 piece 0551908007080 31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	28	Conveyor	1 piece	0571207016060
31 Screw UN5950 M5x10 4 piece - 32 Screw conveyor motor 1 piece 0089500000006	29	Collet	1 piece	0089000345000
32 Screw conveyor motor 1 piece 0089500000006	30	Motor plate - set	1 piece	0551908007080
	31	Screw UN5950 M5x10	4 piece	-
33 Bottom temperature sensor 1 piece 0561008005543	32	Screw conveyor motor	1 piece	0089500000006
	33	Bottom temperature sensor	1 piece	0561008005543


34a	Suction flange	1 piece	0545008105335
34b	Seal for suction flange	1 piece	0545008007333
35	Conv. fan	1 piece	0545008007600
36	Flue gas thermosensor	1 piece	0553808005540
37	Ignition	1 piece	0541908005202
38	Lighter case	1 piece	0545008105220
39	Room temperature sensor	1 piece	0089500390005
40	ОС	1 piece	0089500080005
41	Induced draught fan	1 piece	0561008005807
42	Air inlet funnel	1 piece	0545008105920
43	Hose Meniflex AL L=570	1 piece	0545008105315
44	Cleaning cover back/black	1 piece	0545008005052
45	Seal for cleaning cover	1 piece	0545008005081
46	Door contact switch	1 piece	0089500040005
47a	Stand - back	1 piece	0551908505005
47b	Stand	4 piece	0089501090005
48	Side wall left/black	1 piece	0545008106150
48	Side wall left/grey	1 piece	0545008105151
49	Side wall right/black	1 piece	0545008105140
49	Side wall right/grey	1 piece	0545008105141
50	Front panel/black	1 piece	0545008106100
50	Front panel/grey	1 piece	0545008116100

6.2. Detail A1

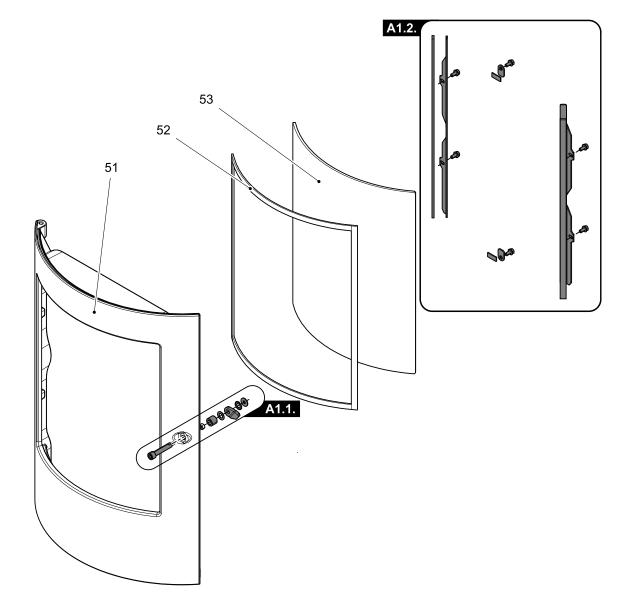

Pos.	Description	Piece	Spare part number	
	Detail A1			
A1.1.	Screwing door - Set	1 piece	0545008005221	
A1.2.	Glass holder/black - Set	1 piece	0545008005222	
51	Combustion chamber door/black	1 piece	-	
52	Seal glass 8x2 mm (1340 mm)	1 piece	0040208020005	
53	Door glass	1 piece	0545008005309	

7. Circuit diagram

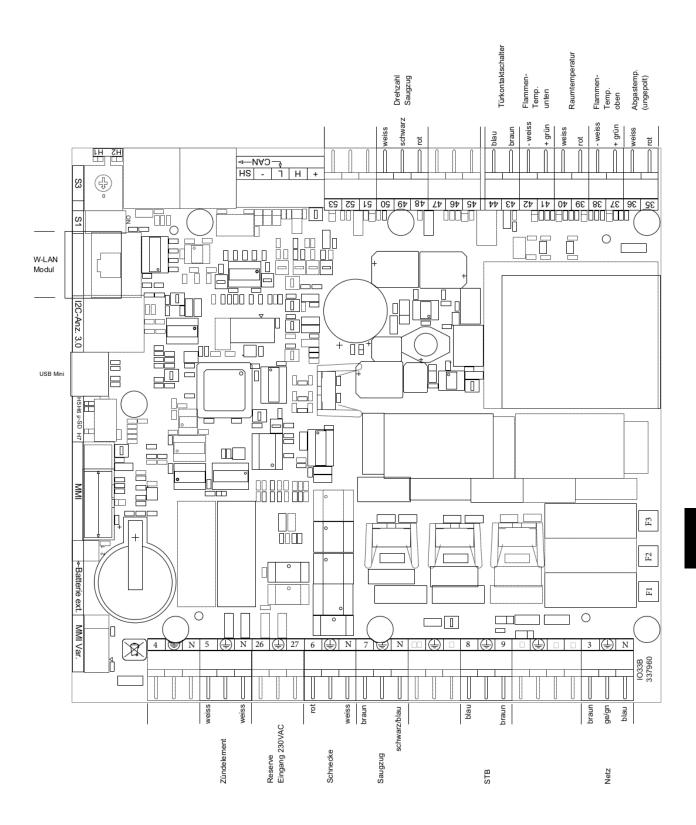

Description Circuit diagram:

No.:	Description Cable harness
3	Mains plug / mains filter
5	Electric ignition
6	Screw conveyor motor
7	Induced draught
8/9	OC
10	Conv. fan
35/36	Flue gas temperature sensor
37/38	Flame temperature sensor
39/40	Room temperature sensor
41/42	Bottom flame temperature sensor
43/44	Door contact switch
48-50	Flue gas fan rotation speed
F1	Fuse T 3,15 A ignition, induced draught fan, screw conveyor motor
F2	Fuse T 3,15 A conv. fan
F3	Fuse T 0,315 A operator console